



## Product Fact Sheet

# DYLON FABRIC PAINTING PENS



- Dylon Fabric Pens remain soft even when they're dry.
- The fabric returns to its original softness even after washing.
- Suitable for all fabrics.
- Gives permanent colour.

### ***Step-by-Step***

1. Wash and dry chosen garment / fabric.
2. Place a protective backing underneath the area to be decorated (e.g. a piece of card or plastic sheet).
3. Draw your design and leave to dry.
4. Iron to fix. Cover your design with a cotton cloth and iron for 1-2 minutes on the hottest setting.
5. Store horizontally.
6. Replace pen cap after use.

### **General Tips**

- For fine outlines, pin the fabric so it is stretched taut.
- The shaped tip gives variable line widths for colouring and detail work.
- Practice first on a spare piece of fabric.
- For best results use on light coloured fabrics only.
- Store in a horizontal position. Replace pen cap after use.

Distributed in Australia by:

✉ Jackel Pty Ltd, PO Box 67, Rydalmere NSW 2116 ☎ 1800 025 021 🌐 [www.dylon.com.au](http://www.dylon.com.au)